


# French Drain




Please complete the following steps prior to contacting Canton Township to connect a drain tile to an existing catch basin:

1. Call Miss Dig 72 hours prior to beginning work (1-800-482-7171)
2. Dig trench for drain tile approximately 8 inches wide. (See Figure A)
3. Install 4 inch perforated drain tile with nylon sock in trench sloped towards the catch basin. No roof drains (downspouts) may be connected to the drain tile.
4. Provide 4 inches of pea stone around all sides of the drain tile.
5. Cover with about 4 inches of top soil.
6. Provide a hole about 2 feet deep and 3 feet wide next to the catch basin where the drain tile will be connected. Leave enough drain tile extended from trench for connection to the catch basin.

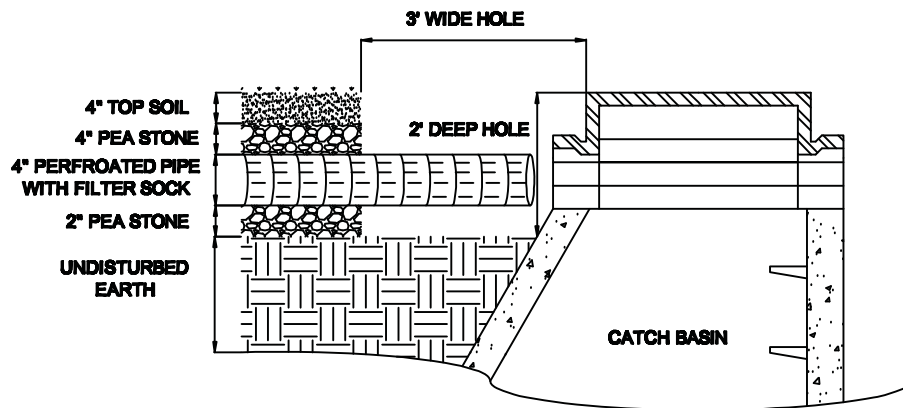

**CONFIGURATION BEFORE CANTON MAKES THE TIE-IN**

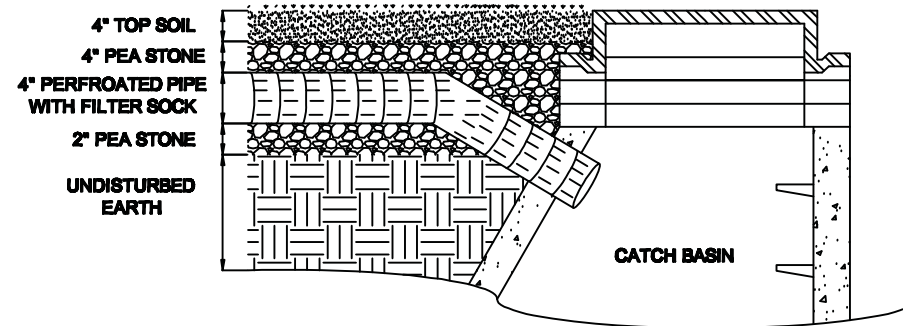

**CONFIGURATION AFTER CANTON MAKES THE TIE-IN**

- Prior to scheduling the connection, a \$250.00 Service Connection fee must be paid.
- Scheduling the connection usually requires a lead time of at least 2 business days.
- Scheduling may be done in person at the Canton Township Department of Public Works located at 4847 S. Sheldon Road, or over the phone by calling 734-397-1011.

If you have any additional questions or concerns, please contact the Environmental Supervisor at 734-397-1011 Monday through Friday between 7:30 a.m. and 3:30 p.m. (After Hours, messages may be left at this number)